

# ADD A FLUID ANALYSIS NOTIFICATION




# ADD A FLUID ANALYSIS NOTIFICATION


You can configure a notification that tells you when a fluid analysis result requires action so that you can intervene to prevent costly downtime.

**1**


In **Needs Review**, select the Settings icon.

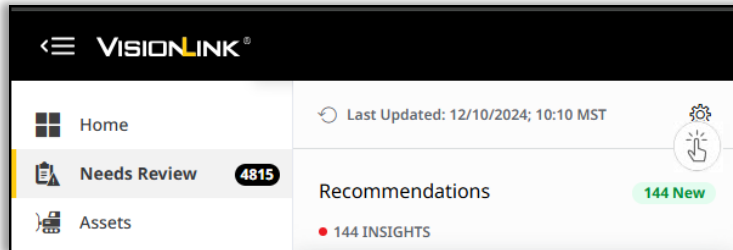**2**

In **Manage > Notifications**, select the **Add Notification** button.

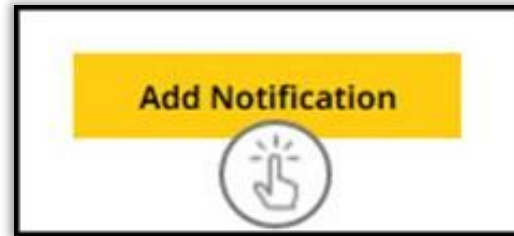**3**

Select **Fluid Sample** from the drop-down menu.

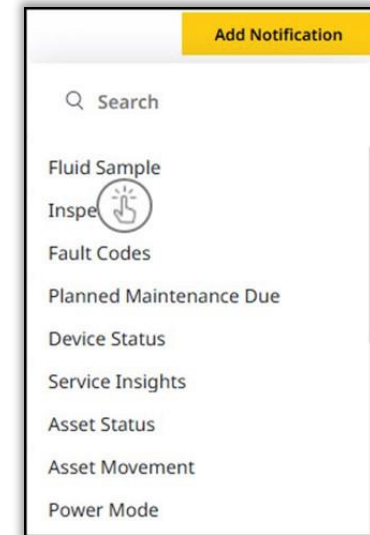


# ADD A FLUID ANALYSIS NOTIFICATION (CONT.)

Specify the notification's parameters in the **Add Fluid Sample Notification** window. Add a notification that tells you when a fluid analysis result requires action.

4

Enter the name of the notification (for example, enter **Sample Result Action Required**) and select the **Action Required** check box.

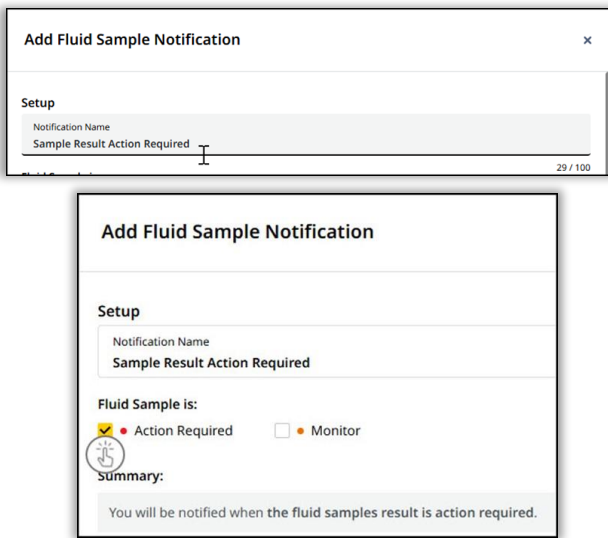

**Add Fluid Sample Notification**

Setup

Notification Name  
Sample Result Action Required

Fluid Sample is:


Action Required  Monitor

Summary:

You will be notified when the fluid samples result is action required.

5

Include all assets. This will trigger a notification for all relevant assets whose fluid analysis result requires attention.

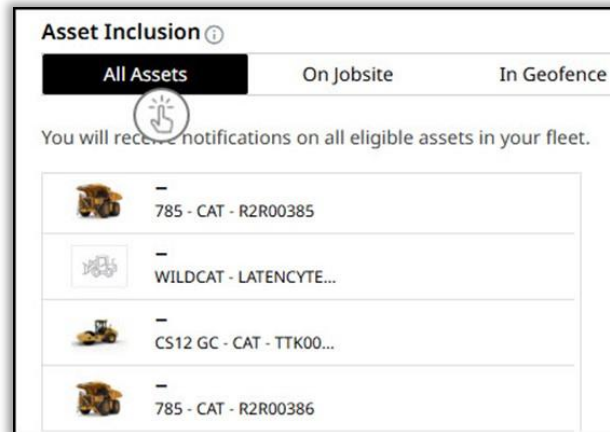

**Asset Inclusion**


All Assets On Jobsite In Geofence

You will receive notifications on all eligible assets in your fleet.

	785 - CAT - R2R00385
	WILDCAT - LATENCYTE...
	CS12 GC - CAT - TTK00...
	785 - CAT - R2R00386

6

Scroll to **Recipients**. By default, your contact information is added to the recipients because you created the notification from the **Needs Review** page.

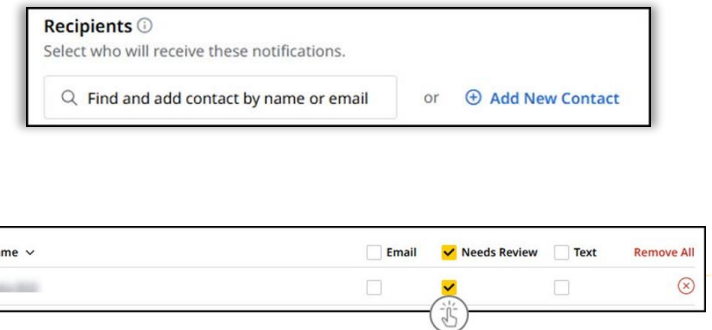

**Recipients**

Select who will receive these notifications.

Find and add contact by name or email or Add New Contact

Name	Email	Needs Review	Text
[Redacted]	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

# ADD A FLUID ANALYSIS NOTIFICATION (CONT.)

Add other recipients by finding the name or email address of the person you want to receive these notifications. If the person isn't found, select **Add New Contact** and enter the following:

7

Select any combination of the delivery methods using the check box(es):

- + By default, **Needs Review** is selected – you and your recipients will see the notification in **Needs Review Health Issues**.
- + Selecting **Email** will automatically accept your and the recipient's consent to receiving email notifications.
- + The first time you (or your recipients) subscribe to a notification via **Text**, you (and your recipients) will receive text messages.

8

Select the information icon next to **Recipients** to learn more.

9

Select **Add**.