


# TRACK FLUID SAMPLES IN VISIONLINK®



# TRACK FLUID SAMPLES IN VISIONLINK®

1

Select the **Track Samples** tab.

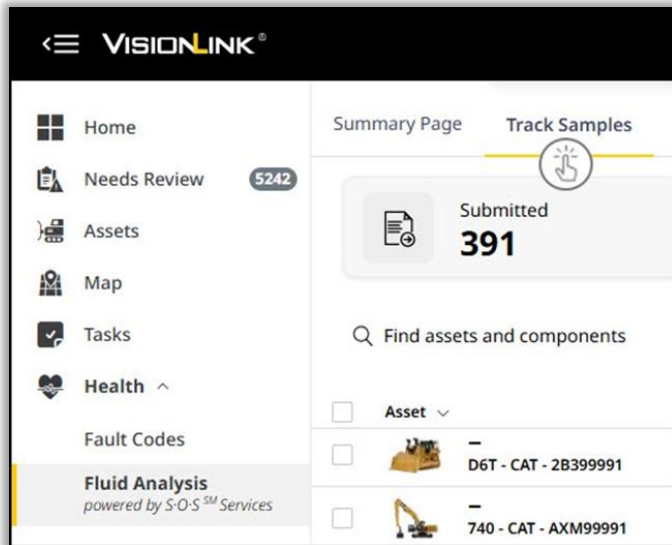



2

By default, VisionLink shows you samples in **Submitted, Received in Lab, and In Analysis** states.



3


You can also filter by the **Sample Progress** drop-down menu or **Filters** in the top navigation bar. Samples can also be filtered by selecting / deselecting the **Submitted, Received in Lab, and In Analysis** states at the top of the page.

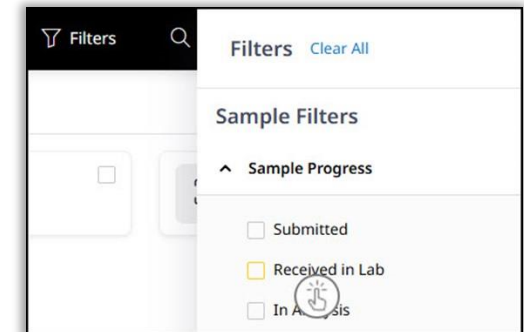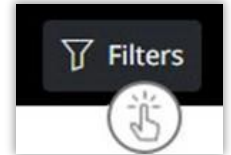

# TRACK FLUID SAMPLES IN VISIONLINK (CONT.)


4

View sample activity for the last seven days or change the date range. If you change the date range, it will change in the **Summary Page** tab and vice versa.

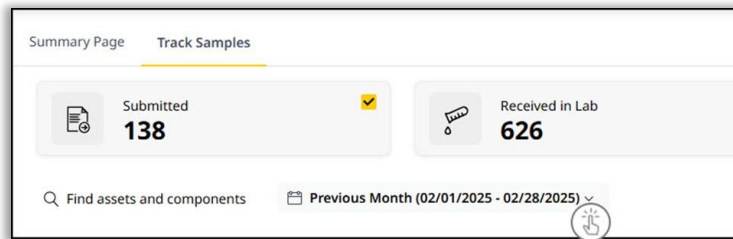

5

You can search for an asset to view sample activity for the selected date range and filters.

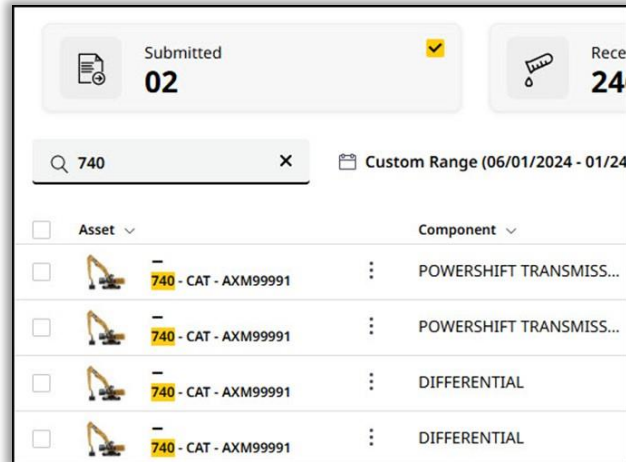

6

You can print sample labels in bulk for multiple assets in the **Track Samples** tab.

